

🕀 Innovate 🕀 Design Deliver

Earth Leakage Units

What do AC/DC Earth Leakage units do?

The AC / DC Earth Leakage Unit is a residual current detection unit which is powered from the vehicle's battery or AC supply and measures the sum of the current in the primary 'supply and return' conductors passing through its aperture.

During normal operation when there is no earth fault or imbalance present in the system, the current in the conductors cancel each other out so no fault is triggered.

The measured residual current signal is filtered and rectified before it is fed into a comparator circuit. If the current is greater than a set detection level, then a fault is signalled via volt-free relay contacts. The fault output may reset after a delay if residual current falls below the desired detection level or remain latched in the fault state until the unit is powered off and on again.

Rowe Hankins' has developed a new dual trip AC Earth Leakage Unit that is digitally programmable and forms the next evolution of current CONNECTION DIAGRAM imbalance detection products and systems.

Available for OEM & Retrofit applications

Features

	\sim
1	= 1
5	$\overline{}$
	\sim

Protection For the protection of AC/DC power supply circuits & equipment.

\sim	
	1
_	<u>ر</u>
\sim	

Locked Locked fault output.



Certification Certified for rail applications.

7 N/O

10 N/O

9°N/O

12 N/O

Get in touch!

+44 (0) 161 765 3000 | sales@rowehankins.com | www.rowehankins.com

Power House | Mason Street | Bury | Greater Manchester | BL9 ORH



0

TRIP 1

TRIP 2